


# hneider

## **Binary input REG-K/8x10**

Operating instructions

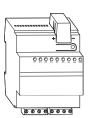

#### Art. no. MTN644592

# For your safety

#### DANGER

# Risk of fatal injury from electrical current.

All work on the device should only be carried out by trained and skilled electricians. Observe the country-specific regulations as well as the valid KNX guidelines.

# CAUTION

The device could be damaged. Never connect the device to an external power source.

The binary input circuits must comply with the safety extra-low voltage conditions (SELV) in accordance with IEC 60364-4-41.

## CAUTION

### The device could be damaged.

- Only operate the device according to the specifications stated in the Technical data. - All the devices that are installed next to the binary input must be equipped with basic insulation at the very least.


#### **Binary input introduction**

The binary input REG-K/8x10 is used to connect eight floating contacts, push-buttons or switches to the bus system.


The binary input makes a contact supply voltage (SELV) available which is electrically isolated from the bus voltage. A power supply is thus not necessary for the connected floating contacts.

The binary input has a bus coupler. It is installed on a DIN rail acc. to EN 60715, with the bus connection made via a bus connecting terminal. A data rail is not required.


#### **Operating and display elements**

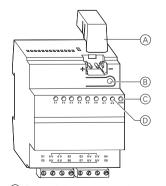


- A Cover of the bus connecting terminal
- B Programming button/programming LED
- © Operational LED
- D Channel status LEDs

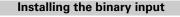


# 1 Set the binary input onto the DIN rail.

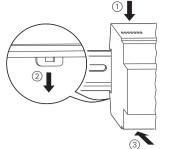

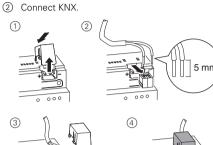



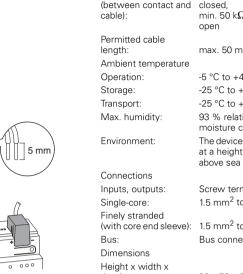


Power supply from

**Technical data** 

| bus:                    | DC 24 V / max.18 mA   |
|-------------------------|---|
| Insulation voltage:     | AC 4 kV bus/inputs  |
| Inputs                  |   |
| Contact voltage:        | max. 10 V (SELV)  |
| Contact current:        | max. 2 mA, pulsating  |
| Transfer resistance     | max. 500 $\Omega$ when contact  |
| (between contact and    | closed,<br>min. 50 k $\Omega$ when contact  |
| cable):                 | open  |
| Permitted cable         |   |
| length:                 | max. 50 m   |
| Ambient temperature     |   |
| Operation:              | -5 °C to +45 °C   |
| Storage:                | -25 °C to +55 °C  |
| Transport:              | -25 °C to +70 °C  |
| Max. humidity:          | 93 % relative humidity, no moisture condensation                                  |
| Environment:            | The device is designed for use at a height of up to 2000 m above sea level (MSL). |
| Connections             |   |
| Inputs, outputs:        | Screw terminals   |
| Single-core:            | 1.5 mm <sup>2</sup> to 2.5 mm <sup>2</sup>  |
| Finely stranded         | 2   |
| (with core end sleeve): | 1.5 mm <sup>2</sup> to 2.5 mm <sup>2</sup>  |
| Bus:                    | Bus connecting terminal   |
| Dimensions              |   |
| Height x width x        |   |
|                         | 00 y 72 y 65 mm   |
| depth:<br>Device width: | 90 x 72 x 65 mm<br>4 modules  |


#### The device could be damaged. Safety clearance must be guaranteed in accordance with IEC 60664-1. There must be at least 4 mm between the individual cores of the 230 V supply cable and the KNX line.

Risk of fatal injury from electrical current.

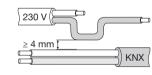

(3) Connect the input cables.

WARNING

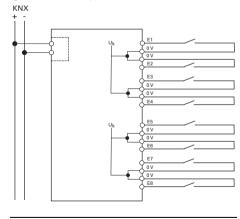

An installation with Y bell wire or J-FY flat i webbed bell wire is permitted.

#### Putting the binary input into operation

Press the programming button.

- The programming LED lights up.
- 2 Load the physical address and the application into the device from the ETS.

The operating LED lights up: The application was loaded successfully, the device is ready for operation.

#### Schneider Electric Industries SAS

If you have technical questions, please contact the Customer Care Center in your country.

#### www.schneider-electric.com

This product must be installed, connected and used in compliance with prevailing standards and/or installation regulations. As standards, specifications and designs develop from time to time, always ask for confirmation of the information given in this publication.